



SAFETY POSTER INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

martor


SECUNORM 175

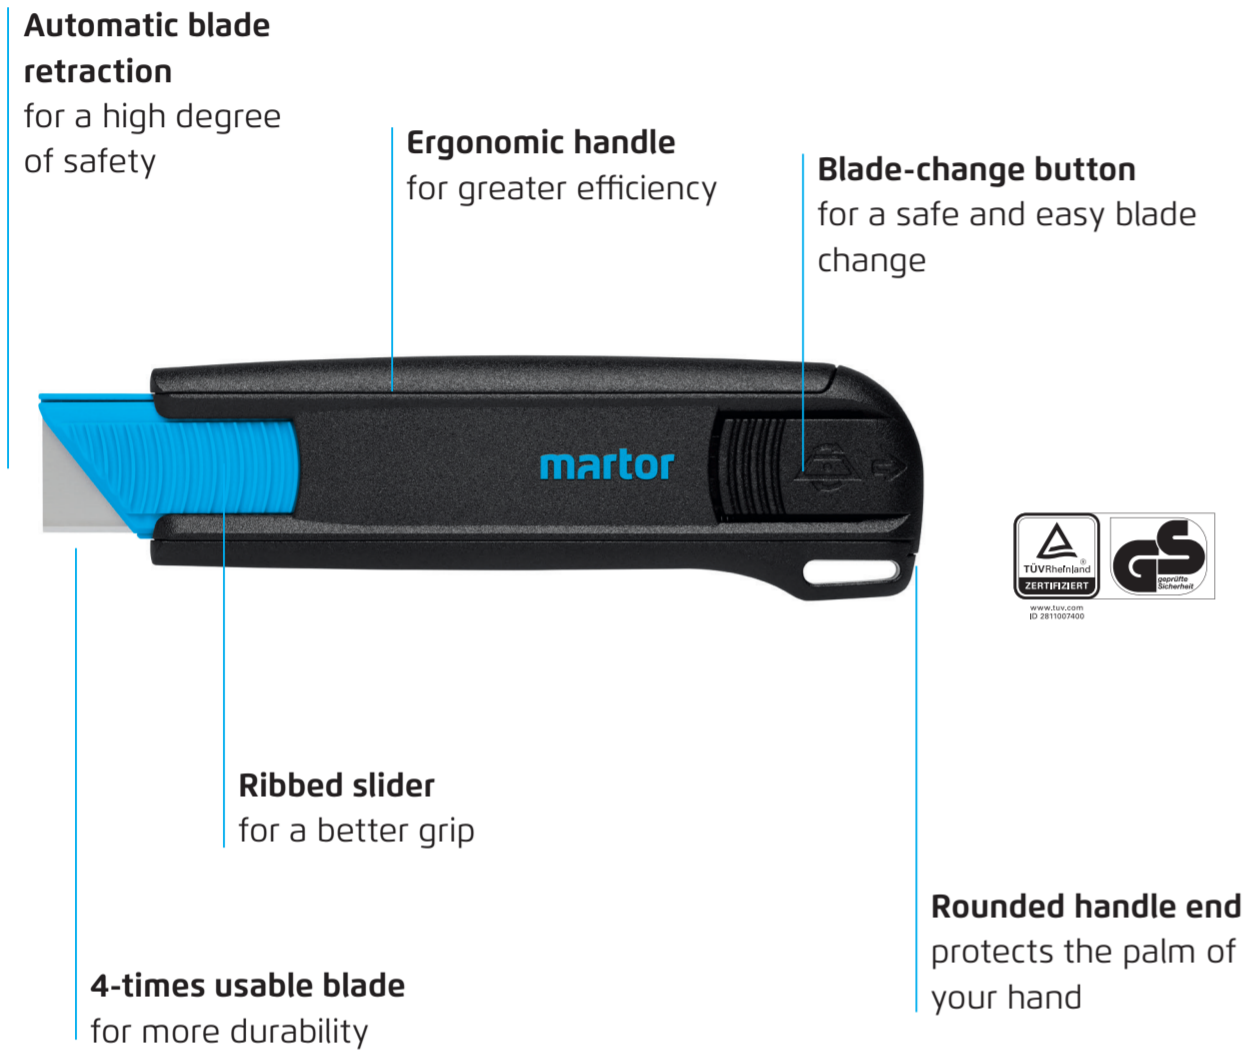


USAGE

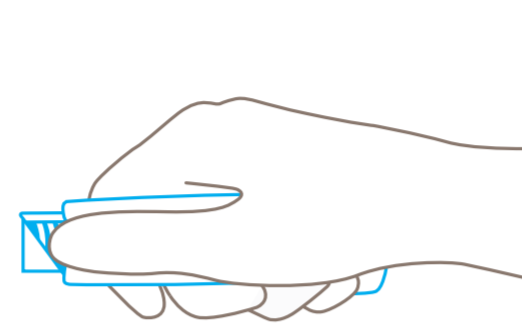


Use the slider to **engage the blade** for cutting.

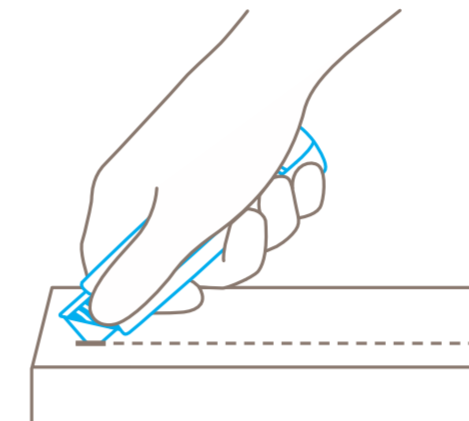

Pierce the cutting material to cut.

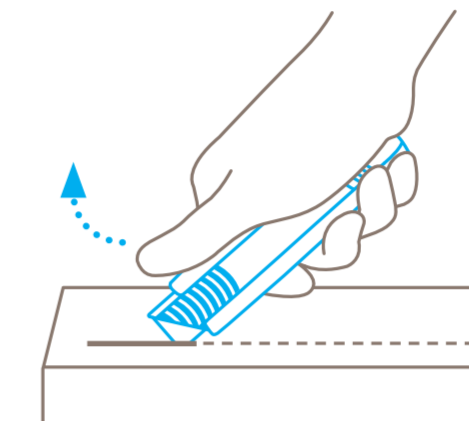


Remove your **thumb from the slider** to ensure automatic blade retraction.

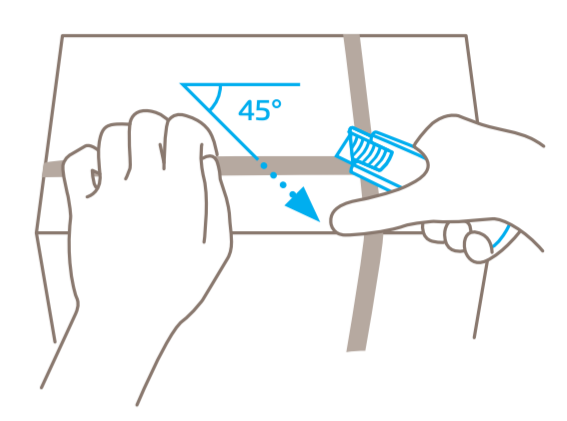


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


BLADE CHANGE

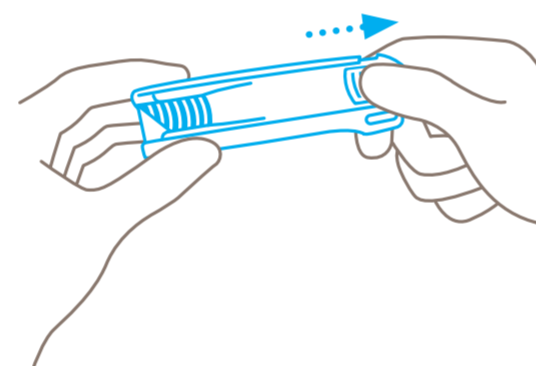


Press the blade-change button and **pull out the plastic insert**.

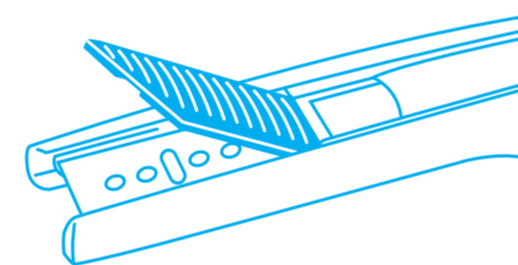

The blade cover opens **automatically**.

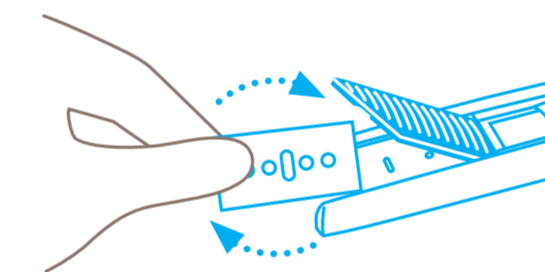


Now you can **turn or change** the blade.

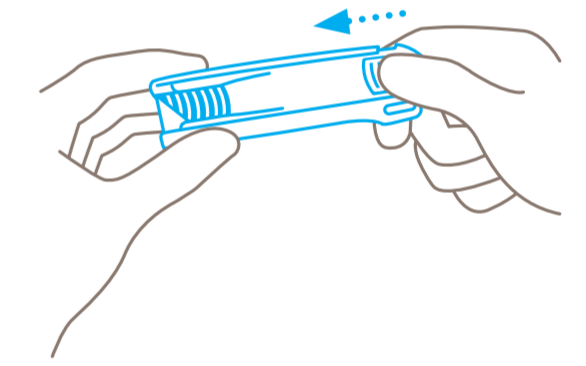


Finally, push the plastic insert back into the handle until you **hear it click into place**.

PROTECTION OF USER

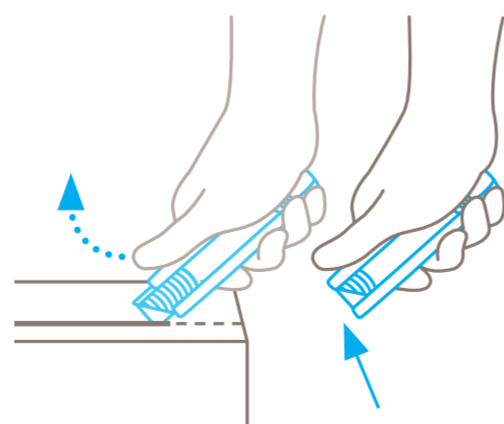


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

PROTECTION OF GOODS

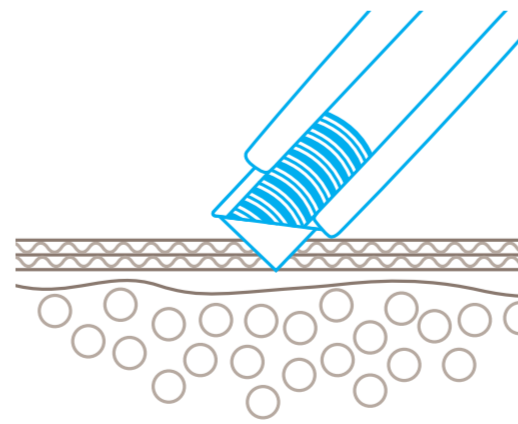


An appropriately **small cutting depth** serves to protect your goods.

DISPOSAL

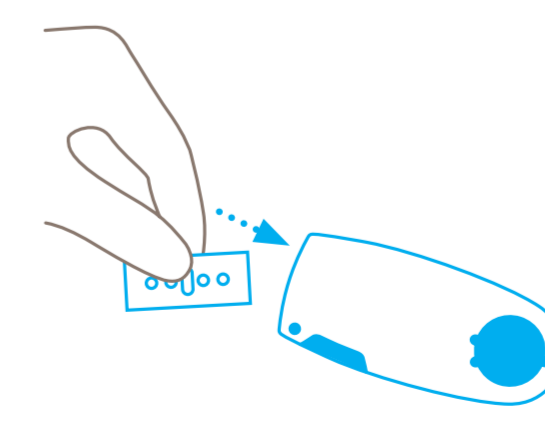

Your **SAFEBOX** is the best place to store **used blades**.

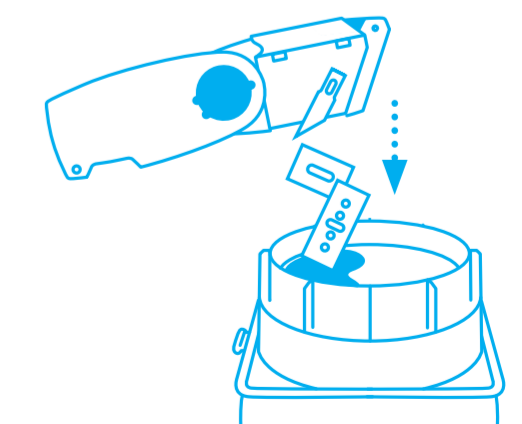

When the **SAFEBOX** is full, **empty all contents** into your **RECYCLING BOX**.

Please note: to ensure your product always functions flawlessly, regularly remove any build-up of cutting material.